

TOC 60 COT

Test 0-94

REF 985 094



Rundküvettentest / Tube test


Test en cuves rondes / Prueba en cubeta cilíndrica

585 nm


Method(e) / Método

0941


10–60 mg/L C

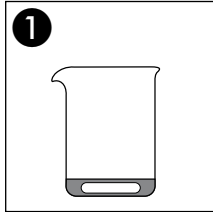


1
10.0 mL Probe
Sample
Echantillon
Muestra

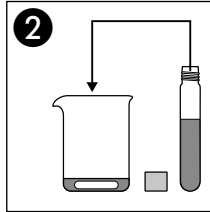


2
500 μ L R0

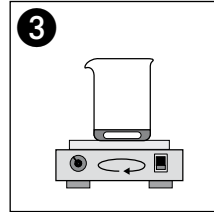


3
10 min Rühren
Stirr
Agiter
Agitar

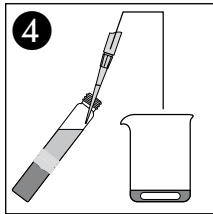


4
4.0 mL in TOC-Küvette
into tube TOC
dans cuve COT
en tubo TOC

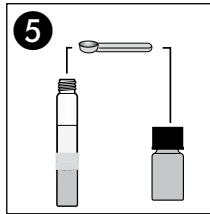


5
1 x R2

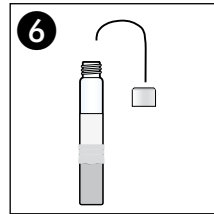


6
Thermokappe aufschrauben
Close with thermo cap
Fermer avec thermo cap
Cerrar con thermo cap

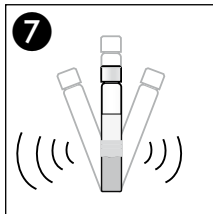

7
Schütteln
Shake
Agiter
Agitar

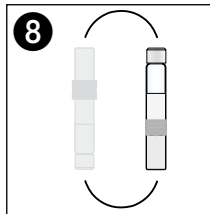


8
Küvette um 180° drehen
Turn tube upside down
Retourner tube
Girar tubo

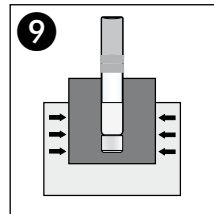


9
120 °C / 2 h

TOC 60 COT


Test 0-94
REF 985 094

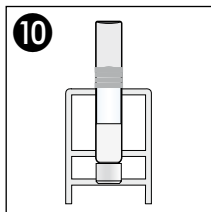


60 min abkühlen lassen
allow to cool
laisser refroidir
dejar enfriar

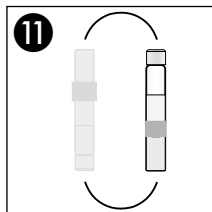

Küvette um 180° drehen
Turn tube upside down
Retourner tube
Girar tubo

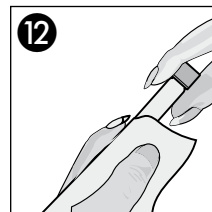

Säuber
Clean
Nettoyer
Limpiar

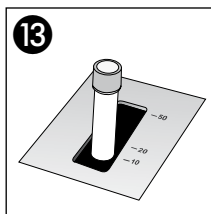

Messung
Measurement
Mesure
Medición