

visicolor® ECO Ammonium 3

Amonio


690 nm

Method(e) / Método


5081 0.1–2.0 mg/L NH₄-N
5082 0.1–2.5 mg/L NH₄⁺
5083 0.1–2.0 mg/L NH₃

Test 5-08


REF 931 208

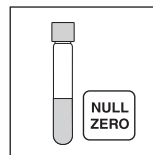


Probe / sample
échantillon / muestra

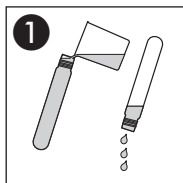


Küvetten spülen
Rinse test tubes
Rincer les éprouvettes
Lavar los tubos

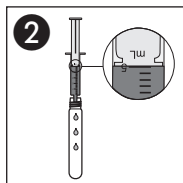


5 mL Probe
Sample
Echantillon
Muestra

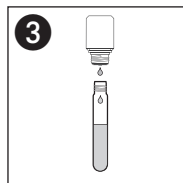


10 Δ NH₄-1

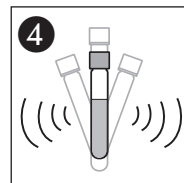


Schütteln
Shake
Agiter
Agitar

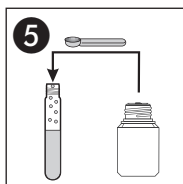


1 Δ NH₄-2

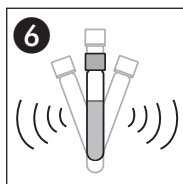


Schütteln
Shake
Agiter
Agitar

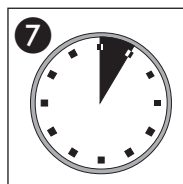


5'00 min

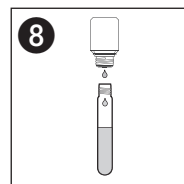


4 Δ NH₄-3

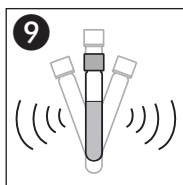


Schütteln
Shake
Agiter
Agitar

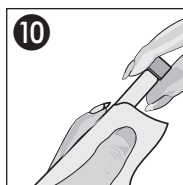


Säubern
Clean
Nettoyer
Limpiar

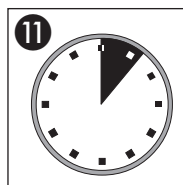

7'00 min

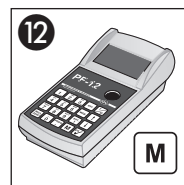

Messung
Measurement
Mesure
Medición

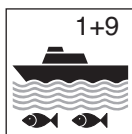

Meerwasser
Sea water
Eau de mer
Agua de mar