

Cyanid 08

Cyanid/Cyanure/Cianuro

Test 0-31

REF 985 031




Rundküvettentest/ Tube test
Test en cuves rondes/ Prueba en cubeta cilíndrica

585 nm


Method(e) / Método

0.02–0.80 mg/L CN⁻


0311

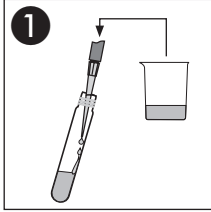


1
4.0 mL Probe
Sample
Echantillon
Muestra

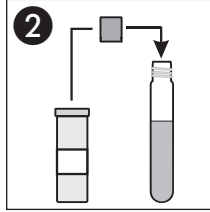


2
1 x **NANOFIX R2**

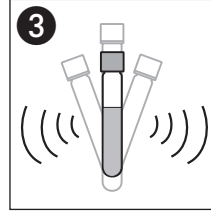


3
Schütteln
Shake
Agiter
Agitar

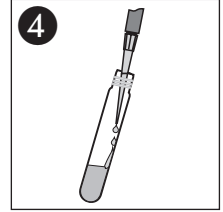


4
500 µL R3

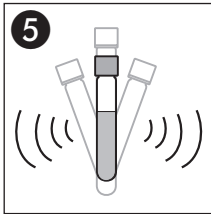


5
Schütteln
Shake
Agiter
Agitar

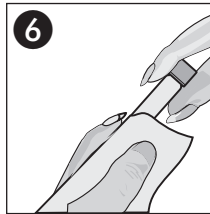


6
Säubern
Clean
Nettoyer
Limpiar

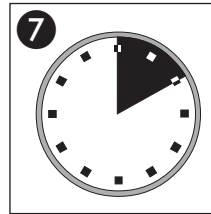

7
10'00 min

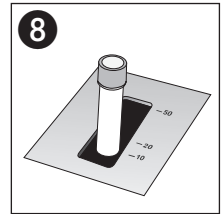

8
Messung
Neasurement
Mesure
Medición



(50 mm)

Method(e) / Método

0.005–0.100 mg/L CN⁻

1311

siehe Gebrauchsanweisung / see instructions for use / voir mode d'emploi / ver instrucciones de uso