

visicolor® ECO Ammonium 15 Amonio


585 nm

Method(e) / Método


5101 0.4–6.2 mg/L NH₄-N
 5102 0.5–8.0 mg/L NH₄⁺
 5103 0.5–8.0 mg/L NH₃

Test 5-10


REF 931 210

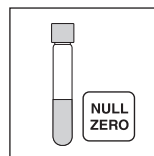


Probe / sample
échantillon / muestra

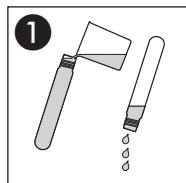


Küvetten spülen
Rinse test tubes
Rincer les éprouvettes
Lavar los tubos

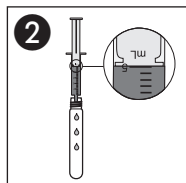


5 mL Probe
Sample
Echantillon
Muestra

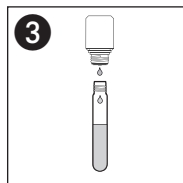


10 ∆ NH₄-1

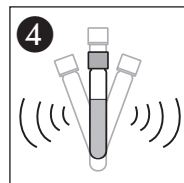


Schütteln
Shake
Agiter
Agitar

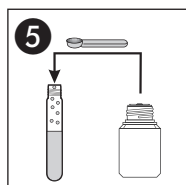


1 ∆ NH₄-2

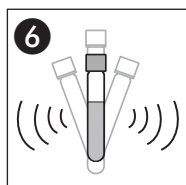


Schütteln
Shake
Agiter
Agitar

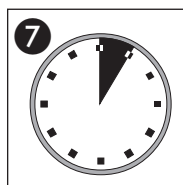


5'00 min

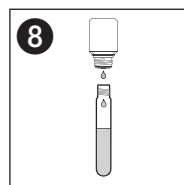


4 ∆ NH₄-3

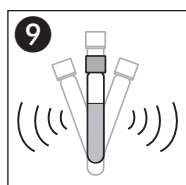


Schütteln
Shake
Agiter
Agitar

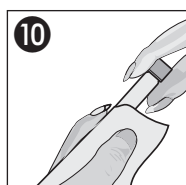


Säubern
Clean
Nettoyer
Limpiar

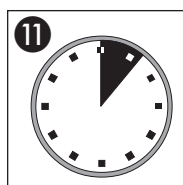

7'00 min

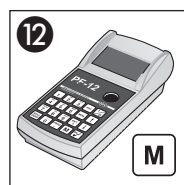

Messung
Measurement
Mesure
Medición

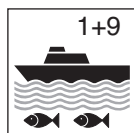

1+9
Meerwasser
Sea water
Eau de mer
Agua de mar