

visicolor® ECO Chlor 2 (gesamt)

Chlorine (total) / Chlore (totale) / Cloro (total)

540 nm


Method(e) / Método

5152


0.10–2.00 mg/L Cl₂

Test 5-15


REF 931 215

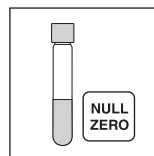


Probe / sample
échantillon / muestra

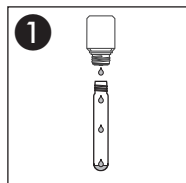


3 ∆ Cl₂-1

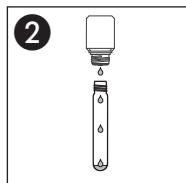


3 ∆ Cl₂-2

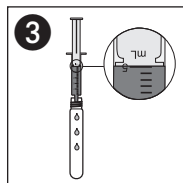


5 mL Probe
Sample
Echantillon
Muestra

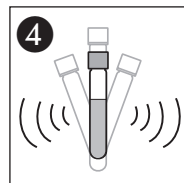


Schütteln
Shake
Agiter
Agitar

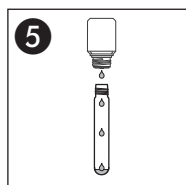


3 ∆ Cl₂-3

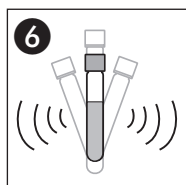


Schütteln
Shake
Agiter
Agitar

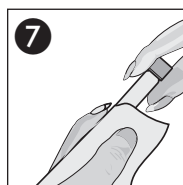

Säubern
Clean
Nettoyer
Limpiar

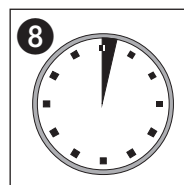

2'00 min

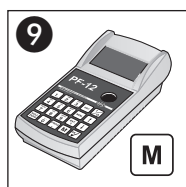

Messung
Measurement
Mesure
Medición



Meerwasser
Sea water
Eau de mer
Agua de mar