

# visicolor® ECO Chrom(VI)

## Chromium(VI) / Chrome(VI) / Cromo(VI)

540 nm

Method(e) / Método

5201


0.02–0.50 mg/L Cr(VI)

5202


0.04–1.00 mg/L CrO<sub>4</sub><sup>2-</sup>

### Test 5-20


REF 931 220

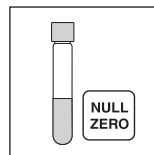


Probe / sample  
échantillon / muestra

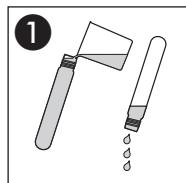


Küvetten spülen  
Rinse test tubes  
Rincer les éprouvettes  
Lavar los tubos

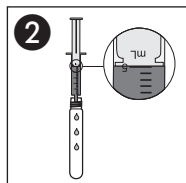


5 mL Probe  
Sample  
Echantillon  
Muestra

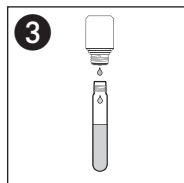


5 ⚭ Cr-1

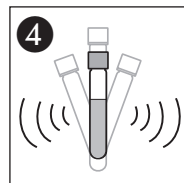


Schütteln  
Shake  
Agiter  
Agitar

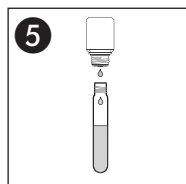


5 ⚭ Cr-2

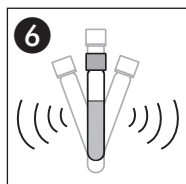


Schütteln  
Shake  
Agiter  
Agitar

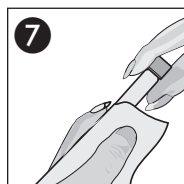

Säubern  
Clean  
Nettoyer  
Limpiar

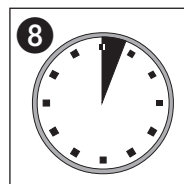

3'00 min

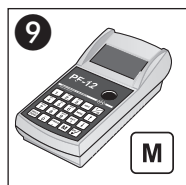

Messung  
Measurement  
Mesure  
Medición



Meerwasser  
Sea water  
Eau de mer  
Agua de mar