

visicolor® ECO Eisen 1

Iron / Fer / Hierro

540 nm


Method(e) / Método

5251


0.10–2.00 mg/L Fe

Test 5-25


REF 931 225

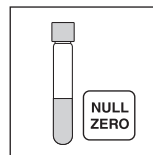


Probe / sample
échantillon / muestra

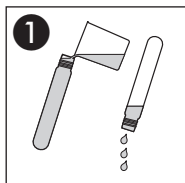


1
Küvetten spülen
Rinse test tubes
Rincer les éprouvettes
Lavar los tubos

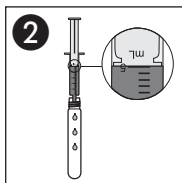


2
5 mL Probe
Sample
Echantillon
Muestra

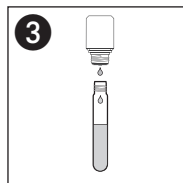


3
5 ♡ Fe-1

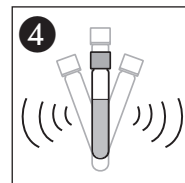


4
Schütteln
Shake
Agiter
Agitar

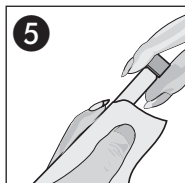

5
Säubern
Clean
Nettoyer
Limpiar

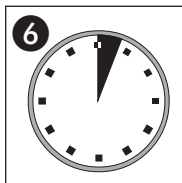

6
3'00 min

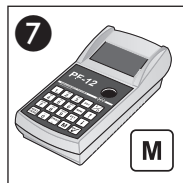

7
Messung
Measurement
Mesure
Medición



Meerwasser
Sea water
Eau de mer
Agua de mar