

visicolor® ECO Fluorid

Fluoride / Fluorure / Fluoruro

585 nm


Method(e) / Método

5271

0.1–2.0 mg/L F⁻


Test 5-27

REF 931 227

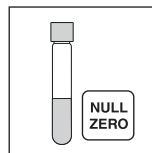


Nullwert / Blanc value
Zéro / Cero


Nullwert / Blanc value / Zéro / Cero

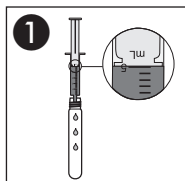


5 mL dest. Wasser
dist. water
d'eau distillée
agua dest.

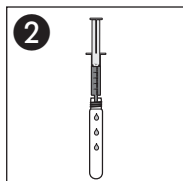


500 µL F-1

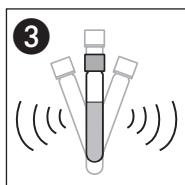

Schütteln
Shake
Agiter
Agitar

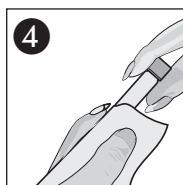

Säubern
Clean
Nettoyer
Limpiar

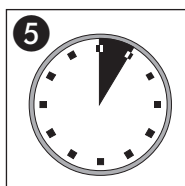


5'00 min




Nullwert
Blanc value
Zéro
Cero


Messwert / Sample / Echantillon / Muestra

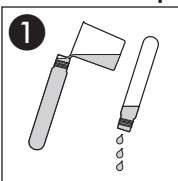


Küvetten spülen
Rinse test tubes
Rincer les éprouvettes
Lavar los tubos

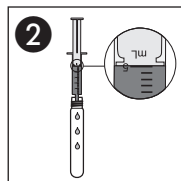


5 mL Probe
Sample
Echantillon
Muestra

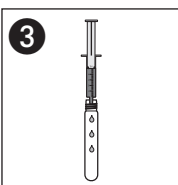


500 µL F-1

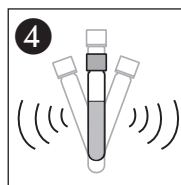


Schütteln
Shake
Agiter
Agitar

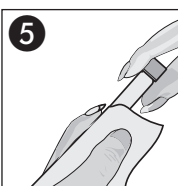

Säubern
Clean
Nettoyer
Limpiar

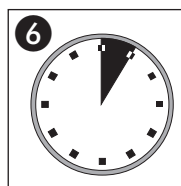

5'00 min

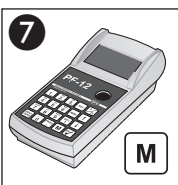

Messung
Measurement
Mesure
Medición



Meerwasser
Sea water
Eau de mer
Agua de mar