

visicolor® ECO Nitrat

Nitrate / Nitrato

436 nm

Method(e) / Método

5411


1.0–14.0 mg/L NO₃-N

5412


4–60 mg/L NO₃⁻

Test 5-41


REF 931 241

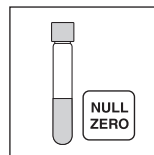


Probe / sample
échantillon / muestra

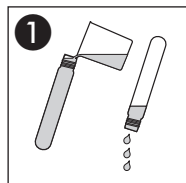


Küvetten spülen
Rinse test tubes
Rincer les éprouvettes
Lavar los tubos

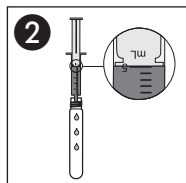


5 mL Probe
Sample
Echantillon
Muestra

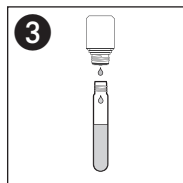


5 ⚡ NO₃-1

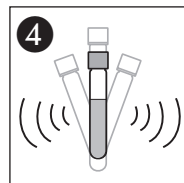


Schütteln
Shake
Agiter
Agitar

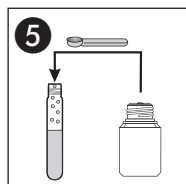


1 ⚡ NO₃-2

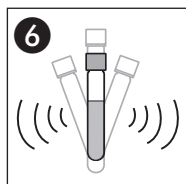


1 min Kräftig schütteln
Shake well
Bien agiter
Agitar intensamente

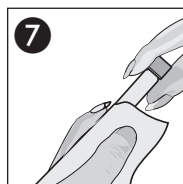

Säubern
Clean
Nettoyer
Limpiar

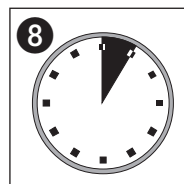

5'00 min

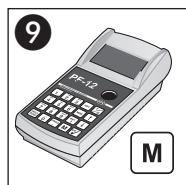

Messung
Measurement
Mesure
Medición



Meerwasser
Sea water
Eau de mer
Agua de mar