

visicolor® ECO Sauerstoff

Oxygen / Oxygène / Oxígeno

540 nm


Method(e) / Método

5881


1–8 mg/L O₂

Test 5-88


REF 931 288

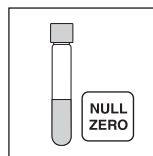


Probe / sample
échantillon / muestra

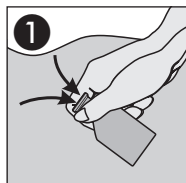


1
Probe
Sample
Echantillon
Muestra

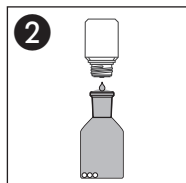


2
5 ∆ O₂-1

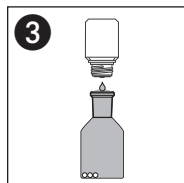


3
5 ∆ O₂-2

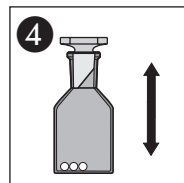


4
Schütteln
Shake
Agiter
Agitar

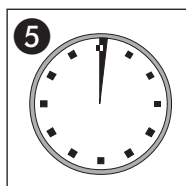


5
1'00 min

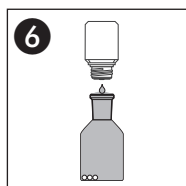


6
12 ∆ O₂-3

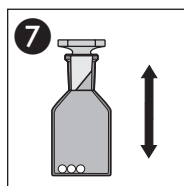


7
Schütteln
Shake
Agiter
Agitar

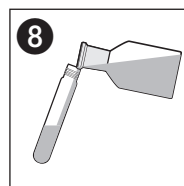

8
5 mL in Rundküvette
into test tube
dans tube
en tubo

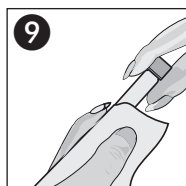

9
Säubern
Clean
Nettoyer
Limpiar

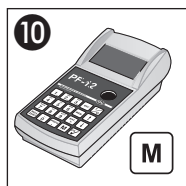

10
Messung sofort
Measurement immediately
Mesure immédiatement
Medición inmediatamente



Meerwasser
Sea water
Eau de mer
Agua de mar