

visicolor® ECO Zink

Zinc

620 nm


Method(e) / Método

5981


0.1–3.0 mg/L Zn²⁺

Test 5-98


REF 931 298

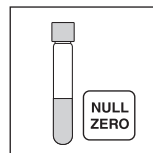


Probe / sample
échantillon / muestra

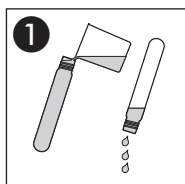


1
Küvetten spülen
Rinse test tubes
Rincer les éprouvettes
Lavar los tubos

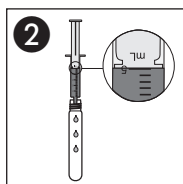


2
5 mL Probe
Sample
Echantillon
Muestra

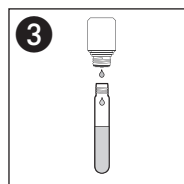


3
5 ∆ Zn-1

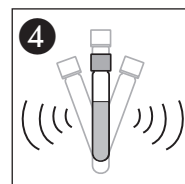


4
Schütteln
Shake
Agiter
Agitar

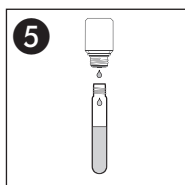


5
5 ∆ Zn-2

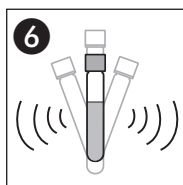


6
Schütteln
Shake
Agiter
Agitar

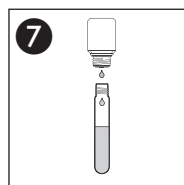


7
10 ∆ Zn-3

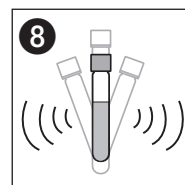


8
Schütteln
Shake
Agiter
Agitar

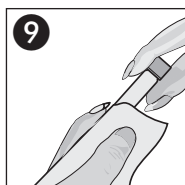


9
Säubern
Clean
Nettoyer
Limpiar

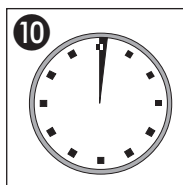

10
1'00 min

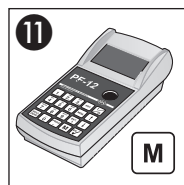

11
Messung
Measurement
Mesure
Medición

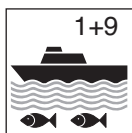

1+9
Meerwasser
Sea water
Eau de mer
Agua de mar