

Kationische Tenside 4

Cationic surfactants / Tensio-actifs cationiques / Tensioactivos catiónicos

Test 0-34


REF 985 034




Rundküvettentest / Tube test

Test en cuves rondes / Prueba en cubeta cilíndrica


0.20–4.00 mg/L CTAB

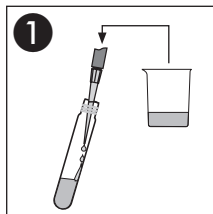


1
4.0 mL Probe
Sample
Echantillon
Muestra

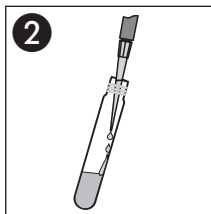

2
500 µL R2

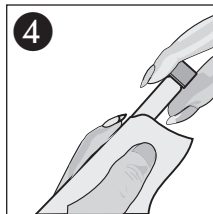

4
Säubern
Clean
Nettoyer
Limpiar

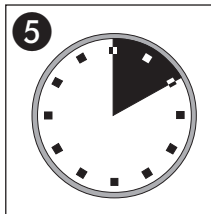


5
10'00 min
Phasentrennung abwarten
wait for phase separation
laisser séparer les phases
esperar la separación de fases


620 nm

Method(e) / Método

0341

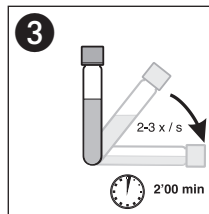

3
Umschwenken
Shake gently
Secouer légèrement
Mezclar volteándolo

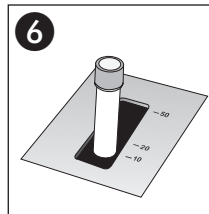

6
Messung
Measurement
Mesure
Medición