

# POC 200

Polyoxycarbonsäuren / Polyoxycarboxylic acids

Acides polyoxycarboxyliques / Acidos polioxicarboxílicos

**Test 0-70**

REF 985 070



Rundküvettentest / Tube test

436 nm

Test en cuves rondes / Prueba en cubeta cilíndrica

Method(e) / Método

20–200 mg/L POC AS 2020

0701

20–200 mg/L POC HS 2020


0702

20–200 mg/L Polystabil® DK


0703

Anwendung im Dampfkessel / Application for steam boilers


Application en chaudière / Aplicación en caldera de vapor

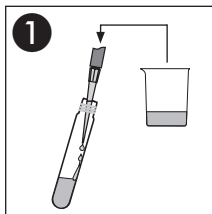


**1**  
1.0 mL Probe  
Sample  
Echantillon  
Muestra

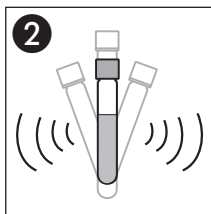


**2**  
Schütteln  
Shake  
Agiter  
Agitar

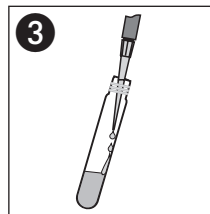


**3**  
1.0 mL R2

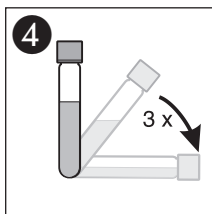


**4**  
Umschwenken  
Shake gently  
Secouer légèrement  
Mezclar volteándolo

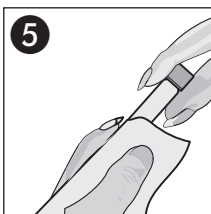

**5**  
Säubern  
Clean  
Nettoyer  
Limpiar

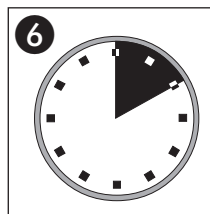

**6**  
10'00 min

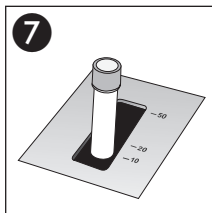

**7**  
Messung  
Measurement  
Mesure  
Medición