

Zinn 3

Tin/Etain/Estaño

Test 0-97

REF 985 097



Rundküvettentest/ Tube test


Test en cuves rondes/ Prueba en cubeta cilíndrica

520 nm


Method(e) / Método

0971


0.10–3.00 mg/L Sn

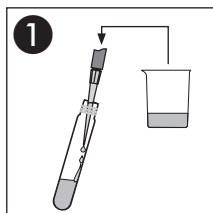


4.0 mL Probe
Sample
Echantillon
Muestra

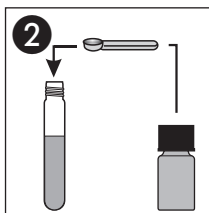


1 x R2

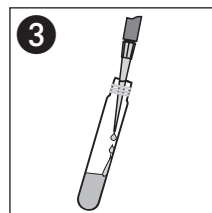


500 µL R3

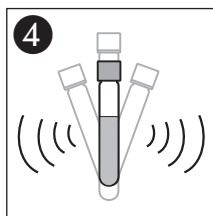


Schütteln
Shake
Agiter
Agitar

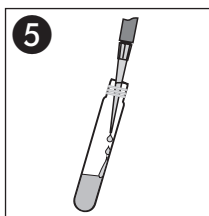


1.0 mL R4

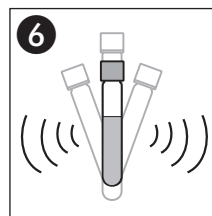


Schütteln
Shake
Agiter
Agitar

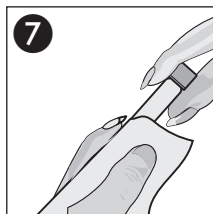

Säubern
Clean
Nettoyer
Limpiar

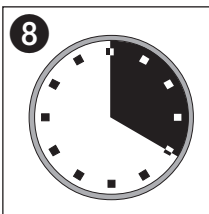

20'00 min

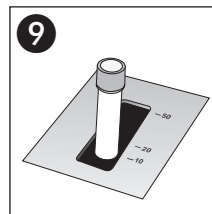

Messung
Measurement
Mesure
Medición