

visicolor® ECO Ammonium 15


Amonio

Messbereich / Range / Domaine de mesure / Rango


0.5 - 15 mg/l NH₄⁺

REF 931 010


931 210

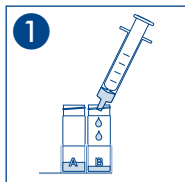


2 x 1 ml Probe
Sample
Echantillon
Muestra

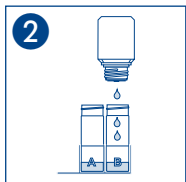


10 ∆ NH₄-1

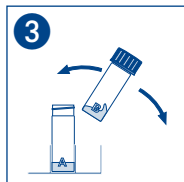


Schütteln
Shake
Agiter
Agitar

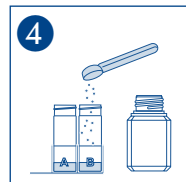


1 ∆ NH₄-2

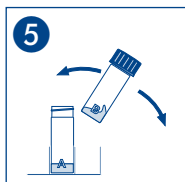


Schütteln
Shake
Agiter
Agitar

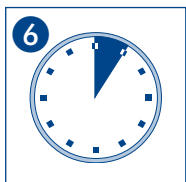


5'00 min

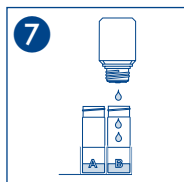


4 ∆ NH₄-3

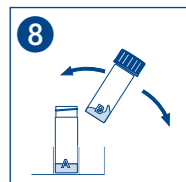


Schütteln
Shake
Agiter
Agitar

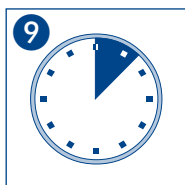

7'00 min

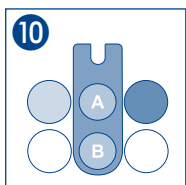

Messung
Measurement
Mesure
Medición

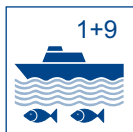

Meerwasser
Sea water
Eau de mer
Agua de mar