

visocolor® ECO Carbonathärte


Carbonate hardness / Dureté carbonatée / Alcalinidad de Carbonato




Messbereich / Range / Domaine de mesure / Rango

REF 931 014


1 Δ \triangleq 1 $^{\circ}$ d

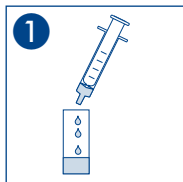


1
5 ml Probe
Sample
Echantillon
Muestra

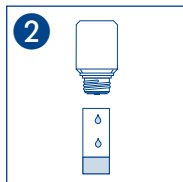


2
2 Δ CH-1

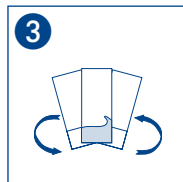

3
Umschwenken
Shake gently
Secouer légèrement
Mezclar volteándolo

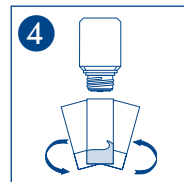

4
2 Δ CH-2
bis Farbumschlag
till coloration
jusque inversion de couleur
hasta cambio de color

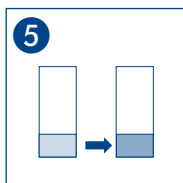

5
1 Δ \triangleq 1 $^{\circ}$ d
blau \rightarrow rot
blue \rightarrow red
bleu \rightarrow rouge
azul \rightarrow rojo



Meerwasser
Sea water
Eau de mer
Agua de mar