


visicolor® ECO DEHA


DEHA

Messbereich / Range / Domaine de mesure / Rango
0.01 - 0.30 mg/l DEHA


REF 931 024
931 224

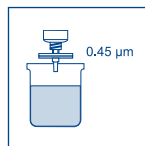


filtrieren wenn trüb
filter if cloudy
filtrer si trouble
filtra si turbido

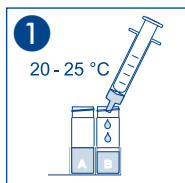


1
20 - 25 °C
2 x 5 ml Probe
Sample
Echantillon
Muestra

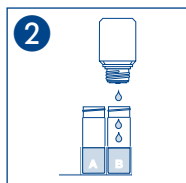


2
4 ⚡ DEHA-1

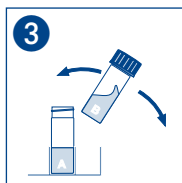


3
Schütteln
Shake
Agiter
Agitar

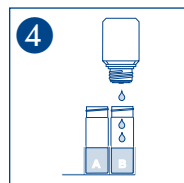


4
4 ⚡ DEHA-2

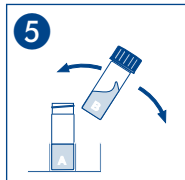

5
Schütteln
Shake
Agiter
Agitar

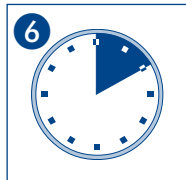

6
10'00 min

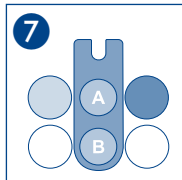

7
Messung
Measurement
Mesure
Medición



Meerwasser
Sea water
Eau de mer
Agua de mar