

# visocolor® ECO Eisen


Iron / Fer / Hierro

Messbereich / Range / Domaine de mesure / Rango


0.04 - 1.0 mg/l Fe

REF 931 026


931 226

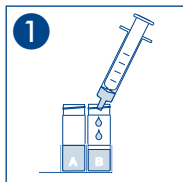

**1**  
2 x 5 ml Probe  
Sample  
Echantillon  
Muestra

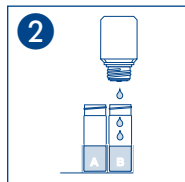


**2**  
4  $\Delta$  Fe-1

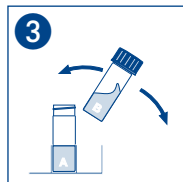


**3**  
Schütteln  
Shake  
Agiter  
Agitar




**4**  
1  $\Delta$  Fe-2

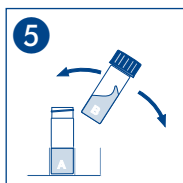

**5**  
Schütteln  
Shake  
Agiter  
Agitar

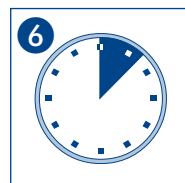

**6**  
7'00 min

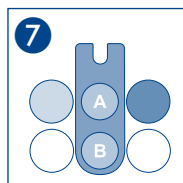

**7**  
Messung  
Measurement  
Mesure  
Medición



Meerwasser  
Sea water  
Eau de mer  
Agua de mar