


# visocolor® ECO Hydrazin


## Hydrazine / Idrazina

Messbereich / Range / Domaine de mesure / Rango  
0.05 - 0.40 mg/l  $N_2H_4$


REF 931 030  
931 230

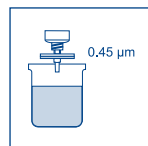


filtrieren wenn trüb  
filter if cloudy  
filtrer si trouble  
filtra si turbido

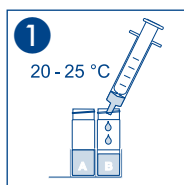


**1**  
20 - 25 °C  
2 x 5 ml Probe  
Sample  
Echantillon  
Muestra

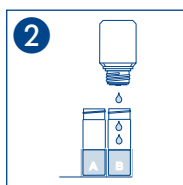


**2**  
5  $N_2H_4$ -1

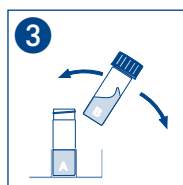


**3**  
Schütteln  
Shake  
Agiter  
Agitar

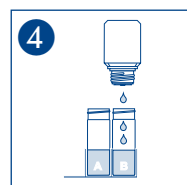


**4**  
5  $N_2H_4$ -2

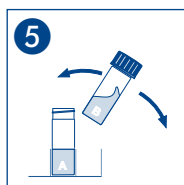

**5**  
Schütteln  
Shake  
Agiter  
Agitar

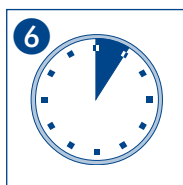

**6**  
5'00 min

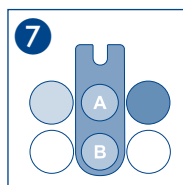

**7**  
Messung  
Measurement  
Mesure  
Medición



Meerwasser  
Sea water  
Eau de mer  
Agua de mar