


# visicolor® ECO Kupfer


Copper / Cuivre / Cobre

Messbereich / Range / Domaine de mesure / Rango  
0.1 - 1.5 mg/l Cu<sup>2+</sup>


REF 931 037  
931 237

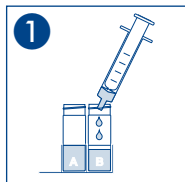


1  
2 x 5 ml Probe  
Sample  
Echantillon  
Muestra

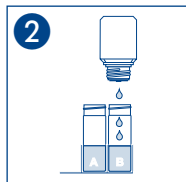


2  
5  Cu-1

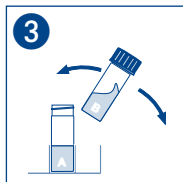


3  
Schütteln  
Shake  
Agiter  
Agitar

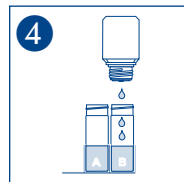


4  
5  Cu-2

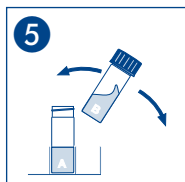

5  
Schütteln  
Shake  
Agiter  
Agitar

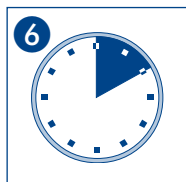

6  
10'00 min

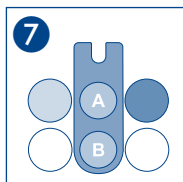

7  
Messung  
Measurement  
Mesure  
Medición



Meerwasser  
Sea water  
Eau de mer  
Agua de mar