


visicolor® ECO Nitrit


Nitrite / Nitrito

Messbereich / Range / Domaine de mesure / Rango
0.02 - 0.5 NO₂⁻


REF 931 044
931 244

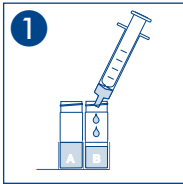

1
2 x 5 ml Probe
Sample
Echantillon
Muestra

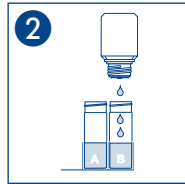


2
4 Δ NO₂-1

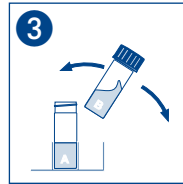


3
Schütteln
Shake
Agiter
Agitar




4
1 Δ NO₂-2

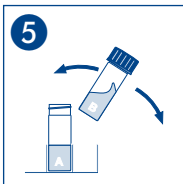

5
Schütteln
Shake
Agiter
Agitar

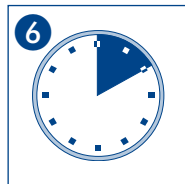

6
10'00 min

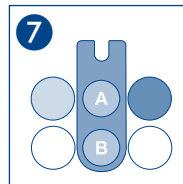

7
Messung
Measurement
Mesure
Medición



Meerwasser
Sea water
Eau de mer
Agua de mar