


visicolor® ECO Sulfit

Sulphite / Sulfite / Sulfito


Messbereich / Range / Domaine de mesure / Rango

1 Δ \triangleq 1 mg/l SO_3^{2-}


REF 931 095

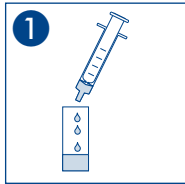


1
5 ml Probe
Sample
Echantillon
Muestra

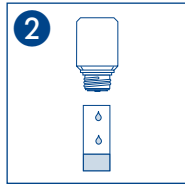


2
5 Δ SO_3^{-1}

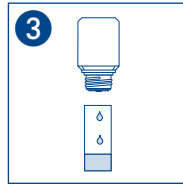


3
5 Δ SO_3^{-2}

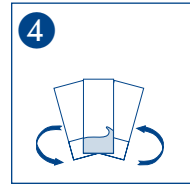

4
Umschwenken
Shake gently
Secouer légèrement
Mezclar volteándolo

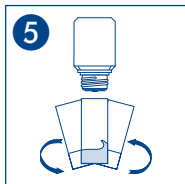

5
 Δ SO_3^{-3}
bis Farbumschlag
till coloration
jusque inversion de couleur
hasta cambio de color

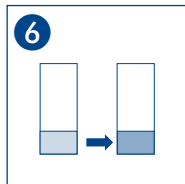

6
1 Δ \triangleq 1 mg/l SO_3^{2-}
farblos \rightarrow blau
colourless \rightarrow blue
incolore \rightarrow bleu
incolore \rightarrow azul



Meerwasser
Sea water
Eau de mer
Agua de mar