




# Chlorine dioxide




Cat. No.	Cuvette	Measurement range	Method	Wavelength
918 163	10 mm	-	(1) 101	540 nm
	50 mm	0.04 - 4.00 mg/l ClO <sub>2</sub>		

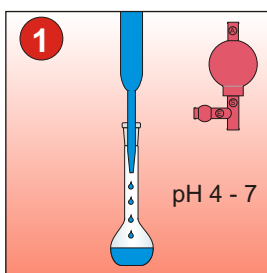


**1** 20 ml sample  
échantillon  
muestra

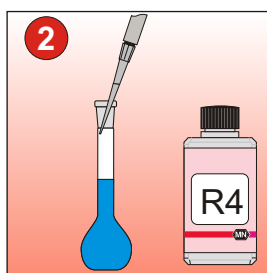


**2** 1.0 ml R4

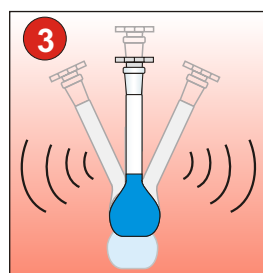


**3** mix  
mélanger  
mezclar

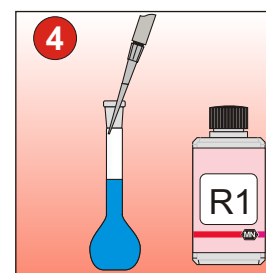


**4** 1.0 ml R1

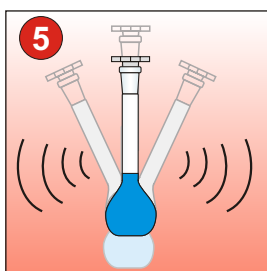


**5** mix  
mélanger  
mezclar

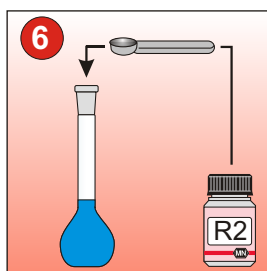


**6** 1 spoon R2

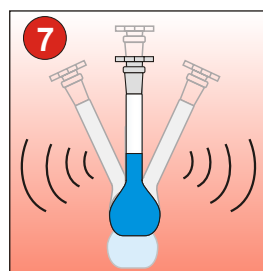


**7** mix  
mélanger  
mezclar

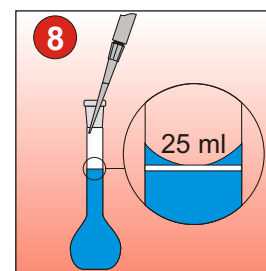

**8** fill up with dist. water  
emplir avec l'eau dist.  
llenar con agua dest.

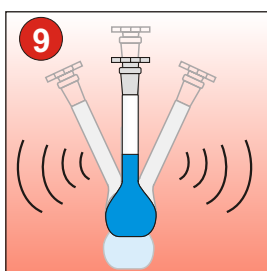


**9** mix  
mélanger  
mezclar

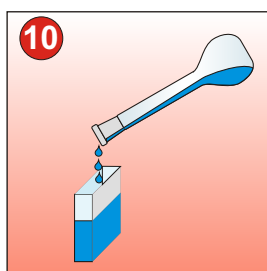


**10** rinse and fill  
rincer et emplir  
lavar y llenar



**11** measurement  
mesure  
medición

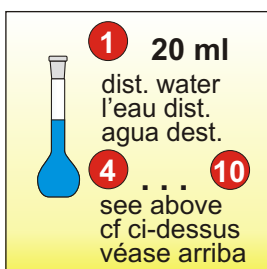

blank value  
zéro  
cero

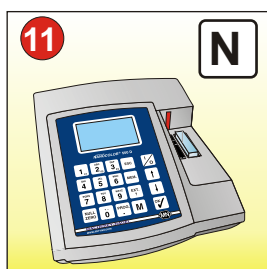

blank measurement  
zéro mesure  
cero medición