




Chloride / Chlorure / Cloruro




Cat. No.	Cuvette	Measurement range	Method	Wavelength
918 20	10 mm	1 - 125 mg/l Cl ⁻	(1) 201	470 nm
	50 mm	0.2 - 20.0 mg/l Cl ⁻		

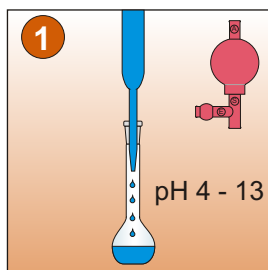


1
20 ml sample
échantillon
muestra

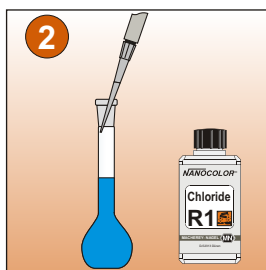


2
2.0 ml R1

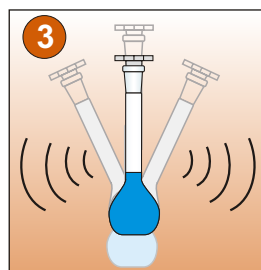


3
mix
mélanger
mezclar

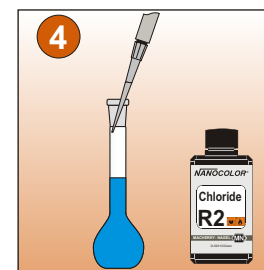


4
2.0 ml R2

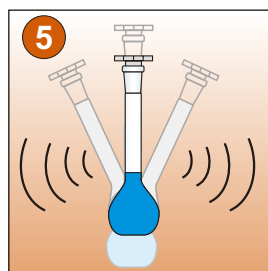


5
mix
mélanger
mezclar

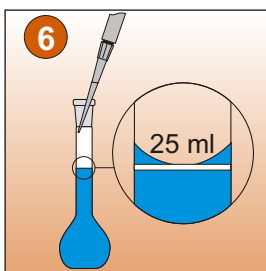


6
fill up with dist. water
emplir avec l'eau dist.
llenar con agua dest.

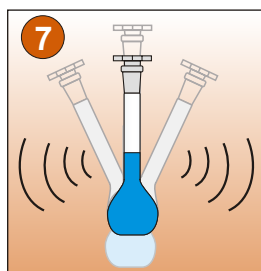


7
mix
mélanger
mezclar

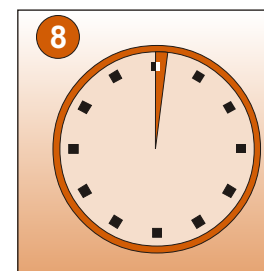


8
1'00 min

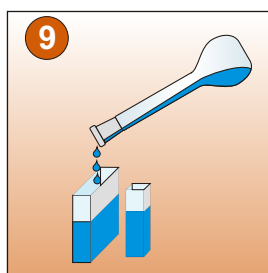


9
rinse and fill
rincer et emplir
lavar y llenar

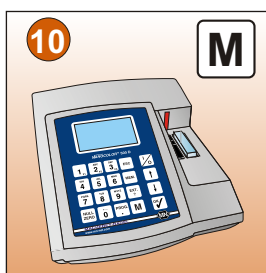

10
measurement
mesure
medición

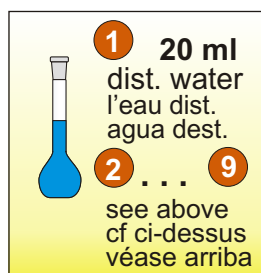

10
blank value
zéro
cero

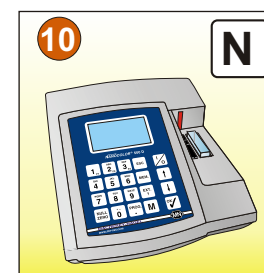

10
blank measurement
zéro mesure
cero medición